



1. Connect your Vu8 to its power supply and to your computer by USB or SPI
2. Launch LeddarConfigurator and connect to your sensor
3. You will get a prompt indicating that the carrier board firmware is outdated

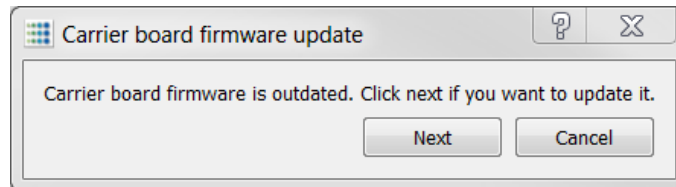


4. Follow the on-screen instructions to perform the firmware update

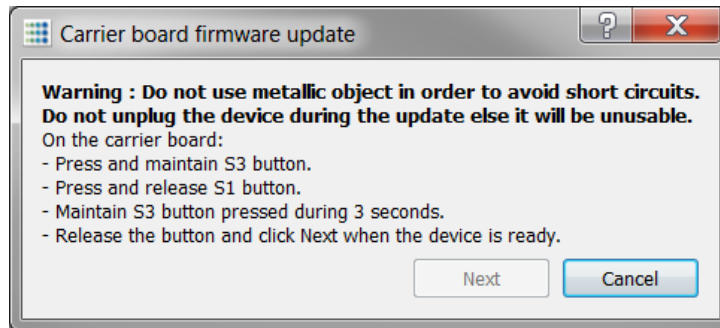


Note: Remember to maintain the S3 button pressed while you press S1.

For reference, here are the S3 and S1 buttons:

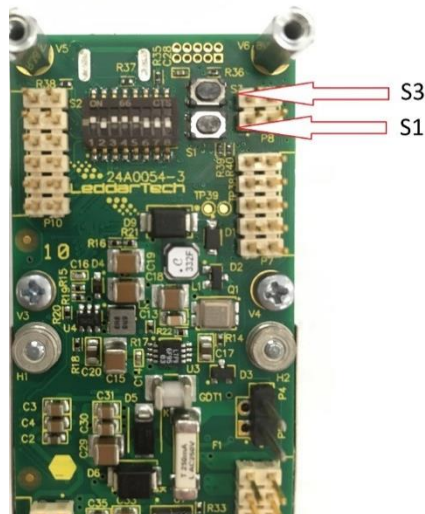


5. At the end of the update, you will have to power-cycle the sensor and connect again

- Upon the second connection, you will get a prompt saying that the software is not up to date

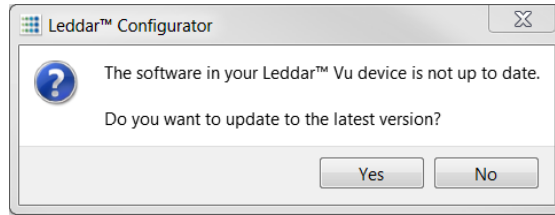

- Perform the second phase of the update, and power-cycle the sensor again
- You can verify the update by going into View->State and verifying the following versions:

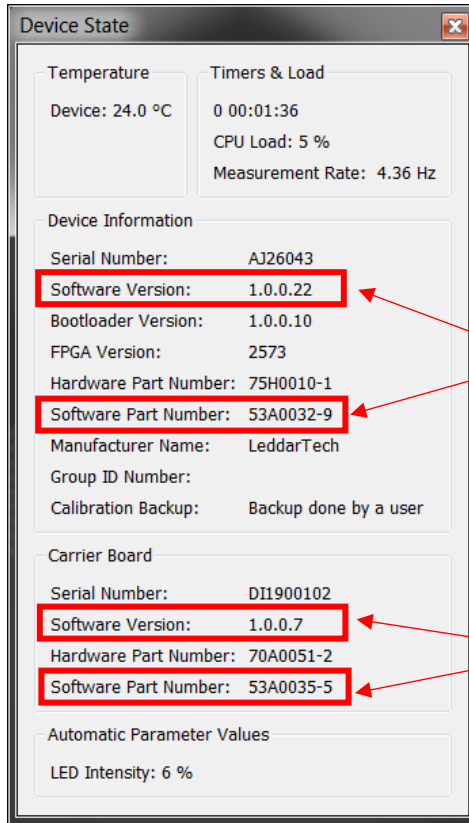

Firmware version

Carrier Board Firmware version